 
Backlit LED Flat Panel

BFPL-14(40/30/20HB)/8A BFPL-22(40/30/20HB)/8A BFPL-24(50/40/30HB)/8A







WARNING Risk of Fire and Electric Shock.

The luminaire must be installed by a qualified electrician in accordance with applicable federal, state, and local laws and codes. Installation requires knowledge of luminaire electrical systems and installer should be familiar with the operation of this product. If not qualified, do not attempt installation; contact a qualified electrician. Manufacturer assumes no responsibility for the improper installation of this luminaire. When installing the fixture, drilling may damage luminaire wiring and electrical parts. Check for wiring and components in enclosure before drilling. Turn OFF power before installation or attempting any maintenance.

To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects. When installing this kit, drilling may damage luminaire wiring and electrical parts. Check for wiring and components in enclosure before drilling.



WARNING Risk of Burn.

Disconnect power and allow fixture to cool before handling or servicing.



WARNING Risk of Personal Injury.

Wear gloves or proper handling protection to prevent cuts or abrasions when handling and maintaining this product. This equipment may have sharp edges. To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warning and instructions included with and on the fixture box and all fixture labels.

Avoid direct eye exposure to the light source while it is on.

NOTICE

- Green ground screw provided in proper location. Do not relocate.
- Minimum 90°C supply conductors.
- Suitable for Dry or Damp location.
- Specifications and dimensions subject to change without notice.

Contact manufacturer with any questions or concerns regarding installation of this luminaire.





Backlit LED Flat Panel

Recessed Mounting:

Figure 1. Carefully unpacked unit and properly inspect for defects before installing. Wear work gloves to prevent dirt and oil from being transferred to the luminaire. If cleaning is needed, use gloves and a dry cotton cloth. It is not recommended to use hazardous chemicals.


Figure 2. Lift up four mounting clips on the sides of the luminaire. You can do it by hand(Do wear work gloves) or use pliers.

Figure 3. Insert luminarie into T-bar ceiling grid. Secure safety cable to connection hole as needed to meet local seismic requirements. Safety cable and method of attachment to the building provided by contractor according to local building codes.

Figure 4. Remove electrical enclosure cover. Carefully remove knock-out for AC line input wires and 0-10V control line. Install listed electrical fittings in the knock-out holes for wire protection if needed.

Figure 5. Plug in AC line(L and N, and GND) to the LED driver using 18-14AWG wire. When connecting 0-10V dimming controller, wires must run through a separate knock-out hole equipped with an appropriate electrical fitting.

Figure 6. Follow wire connection instructions. When using the 0-10V dimming controller run wires from controller through a different knock-out than the AC input wire. Don't forget to return the electrical enclosure cover and tighten the screws.

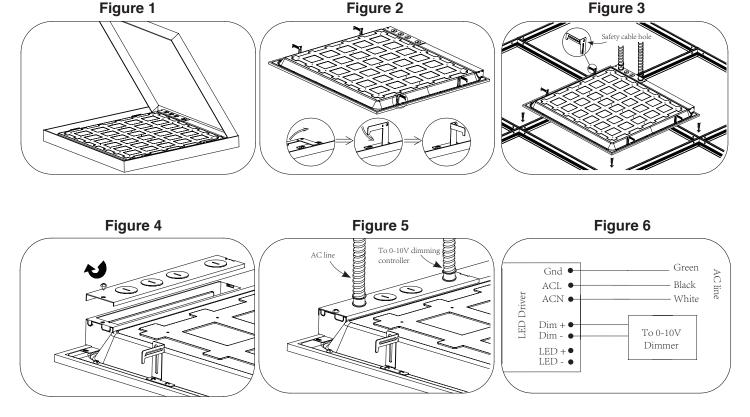

Backlit LED Flat Panel


Cable Suspended Mounting: (BFPL-SACC order separately)


Step1. Pull the end cap of cable A through the provided flange and make sure the end cap positioned in the flange. Fix the flanges onto the ceiling by the self-tapping screws.

Step2. Insert the end of cable A into the hasp attached on the cable B then adjust the cable A to be desired height and adjust the cable B to the desired angles.

Step3. Hook the luminaire up to the hooks attached to the other end of cable B and make a final adjustments.

Step4. Connect LED driver to AC mains power.

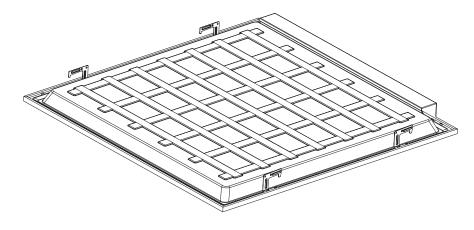

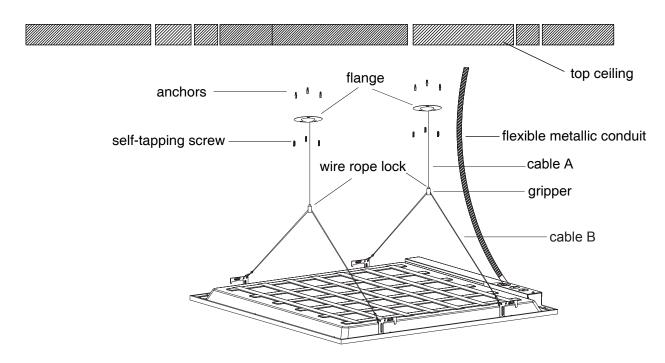




Backlit LED Flat Panel

Field-Adjustable Wattage & CCT:

The end users may adjust the color temperature and lumen output respectively by the two DIP switches integrated to the driver.


- 1.DIP switches are located on the drive box.
- 2. Select a wattage and color temperature by sliding switch left or right respectively to the desired value.

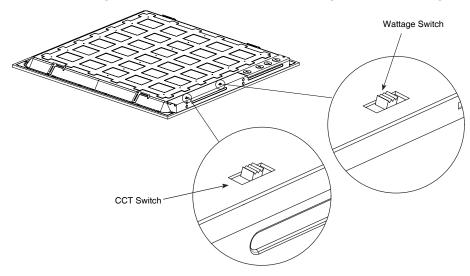


Sensor Installation:

(Sensor order separately, for fixture BFPL-XXX-12V with Aux 12V and sensor receptacle)

- 1. Remove the sensor coverplate and then you can find the wiring terminal.
- 2. Connect the wiring terminal to the sensor and install the sensor at site.
- 3. Reset the sensor setting by remote controller. (Refer to sensor spec sheet and RC operation manual).

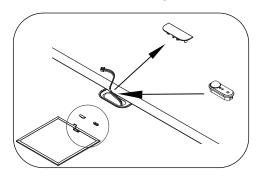

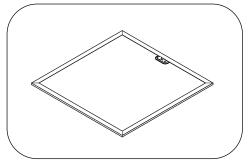

Wiring Diagram:



