

PROJECT NAME

CATALOG NO.

TYPE

DATE


NOTE



FLANGE KIT FOR DRYWALL

| FLK-14 | 48.46° (1231mm) o | 0 | |
|--------|----------------------|---|---------------|
| | 49.33* (1253mm) | | 1.5" (38mm) |
| | | | 12.6" (320mm) |

FLK-22

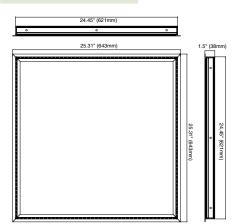


| FLK-24 | | |
|--------|----------------------|------------------------------------|
| • | 48.46" (1231mm) ° | 0 |
| | 49.33" (1253mm) | 1.5" (38mm) |
| | | ● 24.45" (621mm) 25.31" (643mm) |

Installation Instructions

Frang recessed Drywall Mount Installation Steps (Required additional FLK-XX kit):


1. Assemble the four pieces of the drywall kit with the screws povided.



2. Support the drywall kit to the building structure by hanger wires (by others), alternatively screw to wood blocking (by others) or black iron (by others).

3. Follow wirin directions on fixture installation instruction sheet to complete electrical splices.

4. Rotate and slide the fixture as required to fit through the drywall opening as indicated by the directional arrow in figure and place it on the drywall kit.

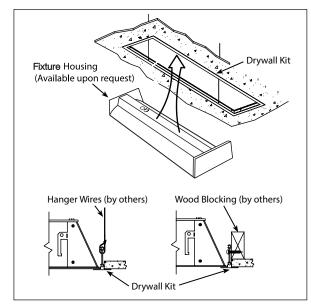

Wiring Diagram:

