

PROJECT

TYPE

DATE

ITEM NO.


NOTE

FLANGE KIT FOR DRYWALL


FLK-XX

Flange Kit for Drywall


FLK-14

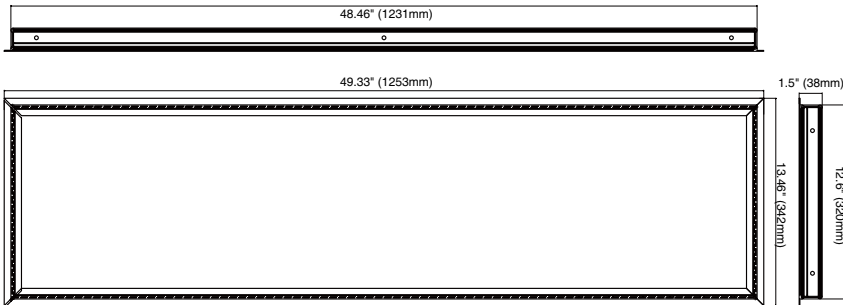

FLK-22

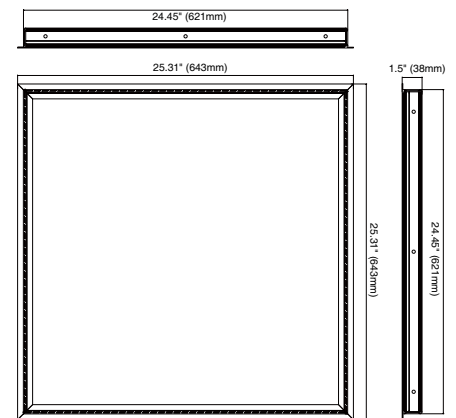

FLK-24

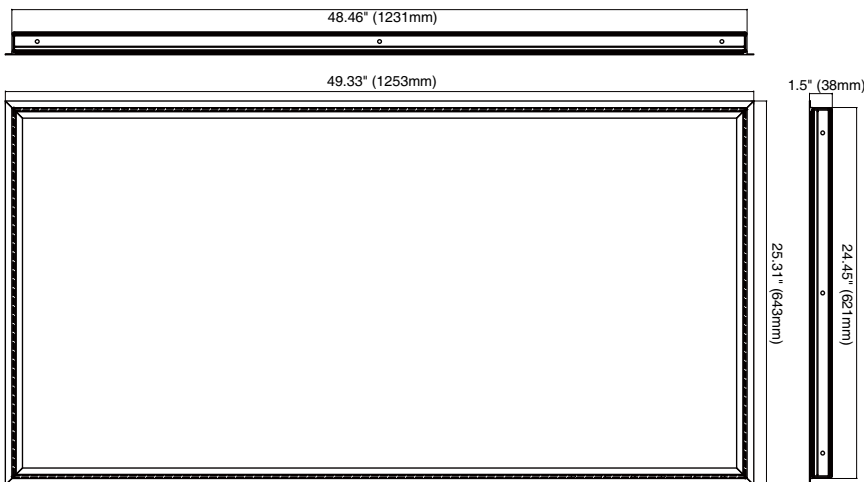

ORDERING INFORMATION

Available with the following Alphalite products:

ILT-CB Series



STL Series



BFPL Series




LTS Series



Installation Instructions

Frang recessed Drywall Mount Installation Steps (Required additional FLK-XX kit):


1. Assemble the four pieces of the **drywall kit** with the screws provided.

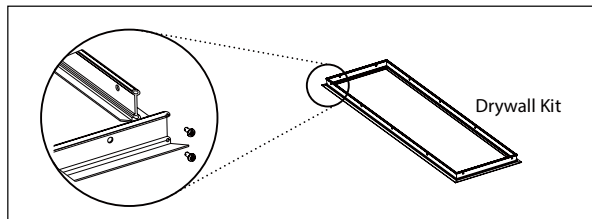

2. Support the drywall kit to the building structure by hanger wires (by others), alternatively screw to wood blocking (by others) or black iron (by others).

3. Follow wiring directions on fixture installation instruction sheet to complete electrical splices.

4. Rotate and slide the fixture as required to fit through the drywall opening as indicated by the directional arrow in figure and place it on the drywall kit.

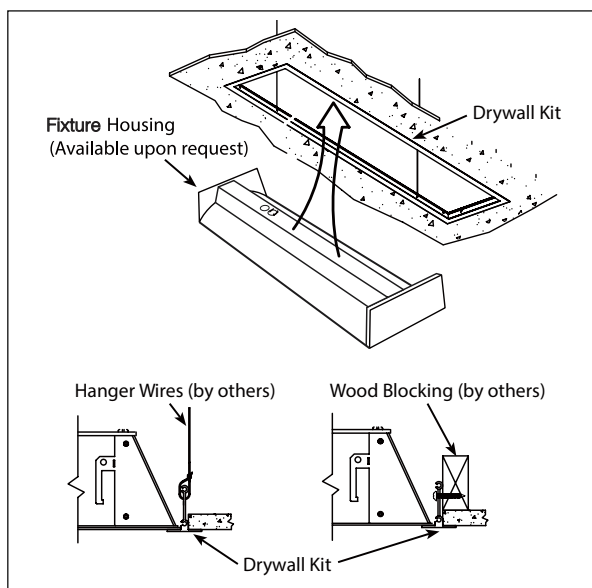

Wiring Diagram:

